


210x148mm



TYRE DEFLATOR INSTRUCTION

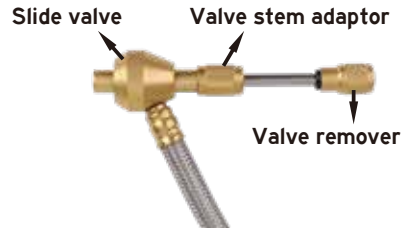

1. Remove the valve cap on your tyre from the valve stem. With the slide valve pushed forward, turn the valve stem adaptor clockwise onto the valve on your tyre until it is firmly attached.



2. Push the valve remover forward until it engages the valve inside the valve stem. Then turn anti-clockwise approximately 6 turns to disengage the valve from the valve stem.



3. Air pressure will push the valve remover out. The gauge will now read the pressure of the tyre.



4. Pull back on the slide valve to release air. Push in on the slide valve to stop air, and check the pressure. Note: gauge will not show correct pressure whilst deflating.



5. When the desired pressure is reached, push the valve remover in and turn clockwise until the valve is firmly screwed into the valve stem.



6. Turn the valve stem adaptor anti-clockwise to remove it from the valve stem. Ensure the valve cap is screwed back onto the valve stem.

PLU: 574474
CODE: YTWD02
Manufactured & packaged for
SRGS PTY LTD ABN 23 113 230 050
6 Coulthards Avenue Strathpine QLD 4500, Australia
MADE IN CHINA

