

# Gazebo Hub 3M

## ASSEMBLY INSTRUCTIONS

Always ensure the tent is clean and dry before packing away. There may be occasions when you have to pack the tent wet or dirty. Do not leave tent packed wet or dirty for longer than 12 hours. Any moisture or dirt left in the tent will cause mildew to develop very quickly causing permanent damage to your tent.

NOTE: ALWAYS SELECT A CLEAR AND LEVEL CAMP SITE TO SET UP YOUR TENT, ENSURE IT IS CLEAR FROM TREES, STICKS AND SHARP ROCKS.

